

4004
MINI DONUT MAKER

Please read these instructions carefully and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

Read all instructions.

Do not use this for more than an hour at a time as it is very hot.

Do not touch hot inner surfaces; use the handles and oven mitts.

To protect against electrical shock, do not immerse power cord, plug or appliance in water or any other liquid.

Do not use outdoors.

Close supervision is necessary when any appliance is being used by or near children.

Avoid contact with moving parts.

The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.

Unplug from outlet when not in use and before cleaning. Allow appliance to cool completely before putting on or taking off parts.

Do not operate any appliance with a damaged power cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to manufacturer or its service agent for examination, repair or electrical or mechanical adjustment.

Do not let the power cord hang over the edge of a table or counter or touch any hot surface.

Do not use the appliance for other than intended use.

Do not place on or near a hot gas or electric burner, or in a heated oven.

Do not clean the appliance with metal scouring pads.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

CLEANING AND CARE

- When you are through baking, always unplug the machine from the wall outlet to turn off and leave it open to cool. After cooling, make sure any excess crumbs or oil have been wiped away with a paper towel.
- Clean the cooking plates with paper towels and use only wood or silicone utensils to get into narrow grooves.
- Wipe the outside of the appliance with a damp cloth only. Do not clean the inside or outside with any abrasive scouring pads or steel wool as this will damage the finish.

**DO NOT PLACE MACHINE BODY IN WATER
OR ANY LIQUID.**

DO NOT PLACE IN DISHWASHER

USING YOUR MINI DONUT MAKER

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust.

If necessary, wipe over with a damp cloth. For best results, pour a tsp of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

When your Mini Donut Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

Insert the pin plug into the power outlet, you will notice that the ready indicator will go on, indicating that the Donut Maker has begun preheating.

Allow your Donut Maker to pre-heat until the ready indicator goes out. This indicates that the cooking plates have reached the correct temperature for cooking.

For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the donuts after cooking.

FOR BEST BAKING RESULTS

- Try not to open the maker during the first 90 seconds of baking.
- Use a piping bag for even and easy batter distribution. Try not to touch the bag to the appliance as it could cause the bag to melt, or a metal tip could scratch the surface.
- Don't remove donuts from maker until they are completely cooked.
- Stir donut batter just until large lumps disappear. Try not to over mix.